

# A step by step guide for ROOFBOND

## Roof restoration - Concrete Tiles

### Step 1: Remove loose ridge caps.


Re-bed using Ridegrite bedding compound. This is a bagged cement based product which is mixed with Concrebond and water. Lay out a bedding guide and apply Ridgerite bedding compound in approximately a 50 mm sausage. Push ridge tiles onto sausage. Use a pointing trowel to clean up excess bedding. Using a pointing trowel and Roofbond flexible Pointing compound re-point the ridge caps. Replace broken tiles. The placement of weep holes in the pointing is essential. Clean up loose bedding or pointing compound and remove off the roof.



**Step 2:** High pressure wash roof using a 3600 p.s.i. water blaster. Do not attempt to remove all colour off the tiles but remove chaulkiness, mould and dirt. Pay close attention to the cleaning of the nose of the tiles.



**Step 3:** Apply 1 primer coat using Shieldseal W using an airless machine and a 517 tip size. Do not apply too thickly and do not have runs occurring in the valleys of the tiles.  
(Note: photo shown is Shieldseal being applied to a Colorbond roof)

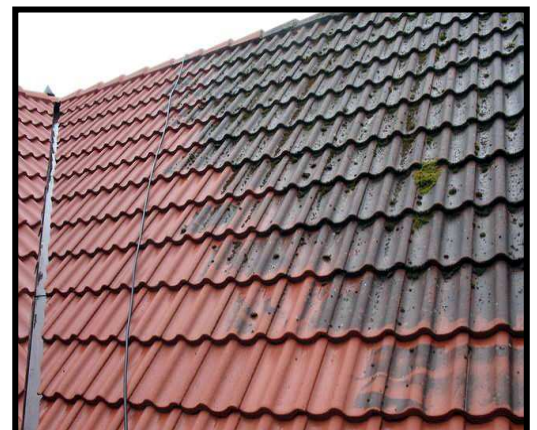

**Step 4:** Apply one coat of Roofbond paint in the chosen colour by using an airless and a 521 tip.



**Step 5:** Apply the 2<sup>nd</sup> coat of Roofbond paint in the chosen colour by using an airless and a 521 tip.



**Step 6:** Clean up site and Machinery.

## SHIELDCOAT PTY LTD

Unit 2/1075 Beaudesert Rd,

Archerfield Q 4108

Phone: (07) 3274 6911

Fax: (07) 3274 6414

Email:

[info@shieldcoat.com.au](mailto:info@shieldcoat.com.au)

Web:

[www.shieldcoat.com.au](http://www.shieldcoat.com.au)

